

## Instruction For Water Blower ES-2400

ES-2400 water blowers have adopted rigid plastic shell and cascade alternating current motor, which can ensure the long life-span as well as the cute appearance of the products. The wind volume is adjustable and the serial products have the heating device. With the help of the arm set, the products can reduce the workload of the beauticians. The power is  $\leq 2200\text{W}$ ; the wind speed is  $\leq 48\text{m/s}$ ; the heating temperature is  $\leq 55$  degrees centigrade.

### Operation of the Water Blower:

1. As showed in the picture, loose the clasp, insert the flexible tube into the first air put-let, tight the clasp.

According to your need, choose the suitable hose coupler (as showed in the picture).

2. According to the assigned voltage, choose the proper one, (220V-240V), or the blower might be damaged by the wrong voltage.

3. Turn on the power switch, in according with the requirement, choose the suitable air volume and temprature.

4. Clean the air intake net leaf regularly. Remove the fixing screw and air intake net cover, and then you can do the cleaning and change, which can prevent the air intake from being blocked and thus can protect the motor.

5. If the motor does not work, please check whether the power supply has been connected. If the connection and contact are good but the product still can not work properly, send it to some professional men for fix. Please do not disassemble the product arbitrarily.



### Safety Instructions:

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.

3. Children should be supervised to ensure that they do not play with the appliance.

4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

– when the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off;

– for additional protection, the installation of a residual current device(RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



This marking indicates that this product should not be disposed with other household wastes throughout the EU.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

